


PV SURGE PROTECTOR

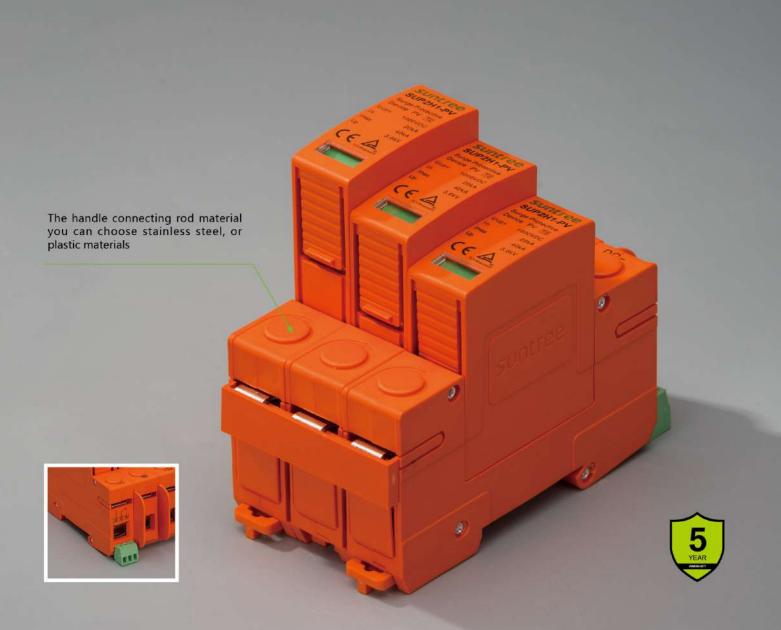


Lightning and surge protection for PV systems installed on buildings

Please take the following measures to protect the PV system from damage of lightning impulse or surge voltage:

- All metal parts (such as framework, support, etc) of PV system must be connected to the main equipotential bus to ensure reliable equipotential connection of the whole system.
- Must keep a safe distance (S) between all parts of PV systems and the external lightning protection system. The external lightning protection system can be connected to the main equipotential bus, fundamental earth screen or ground ring only.
- Adoption of twisted-pair wiring to reduce system jamming.
- For cables from outdoors, the surge protection device should be installed at the entrance of buildings. An all-round and systematic lightning protection should also protect other facilities on buildings from being damaged.


Reasonable wiring:

adoption of twisted-pair wiring with lines as short as possible, to avoid big loop and reduce induced voltage on circuits.

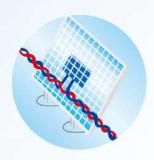


Surge protection device installed on the DC side:

for cables from outdoors, the surge protection device should be installed at the entrance of buildings.

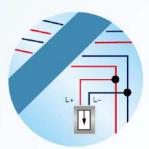



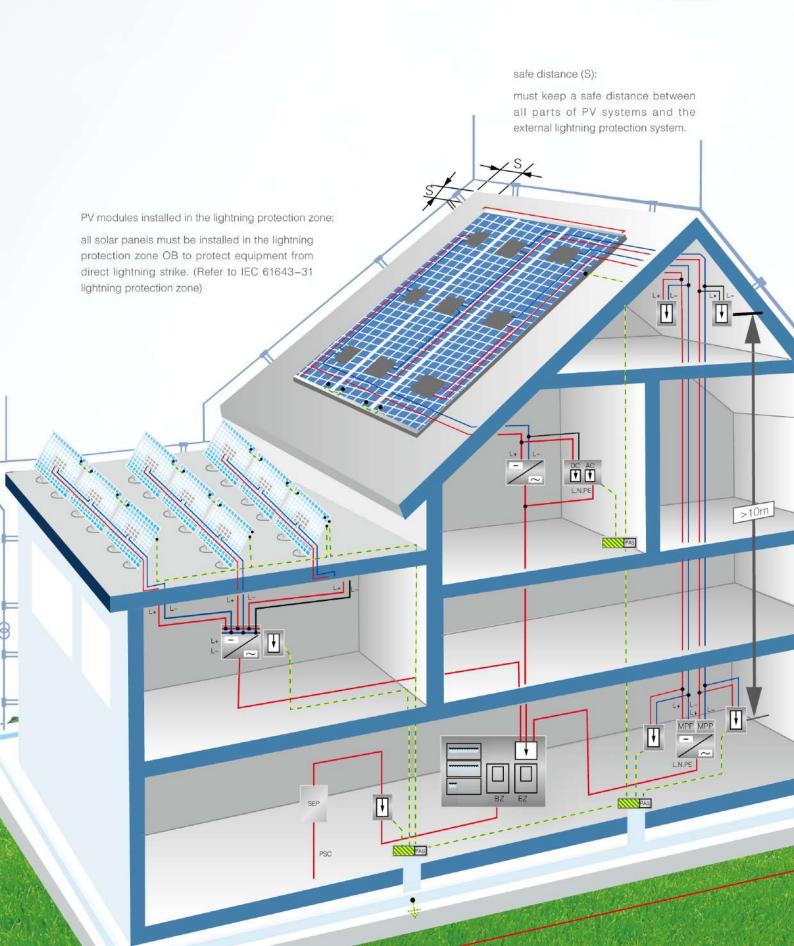



SUP2H-PV Series Surge Protector

SUP2H-PV surge protective device, protect against lightning surge voltages in solar system (photovoltaic power supply system).

These units must be installed in parallel on the DC networks to be protected and provide common and different modes protection. Its installed location are recommended at both ends of the DC power supply line (solar panel side and inverter/converter side), ely if the line routing is external and long.

High energy MOVs equipped with specific thermal disconnectors and related

C€ A ROHS

Specifications

SUP2H-PV series surge protector		SUP2H-PV		
PV DC-specific (LEC 66143	-1/EN 61643-31)		.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
Pole		2P	2P	2P
Electrical Parameter				
Classified test			11	11
UCPV(V DC)		500	600	800
In(8/20)us (kA)		20	20	20
Imax(8/20)us (kA)		40	40	40
Up (kV)		2.8	2.8	3.0
Remote control and indication	on			
Indication window				
Plug-in Module		***************************************		.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Remote signal contact				
	maximum working voltage(V)	250 AC/30V DC	250 AC/30V DC	250AC/30V DC
Remote signal contact	maximum working current (A) 1A(250V/AC)	1A(250V/AC)	1A(250V/ AC)	1A(250V/ AC)
	1A (30V DC)	1A(30V/AC)	1A(30V/ AC)	1A(30V/AC)
Wiring & Installation				· · · · · · · · · · · · · · · · · · ·
Wiring capacity(mm²)	Hard wire	4~25	4~25	4~25
	Flexible wire	4~16	4~16	4~16
Stripping length(mm)		10	10	10
Terminal screwa		M5	M5	M5
T	Main ciruit	3.5	3.5	3.5
Torque(Nm)	Remote signal contact	0.25	0.25	0.25
Protection class	All profile	IP40	IP40	IP40
	Connection port	IP20	IP20	IP20
Installation environment		No obvious shock and vibration		
Altitude (m)		≤2000	≤2000	≤2000
Working Temperature		-3.0~+70	-3.0~+70	-3.0~+70
Relative humidity		30%~90%	30%~90%	30%~90%
How to Install		Installed with H35-7.5/DIN35 steel mounting rail		
Size(mm)(WxHxL)	W	36	36	36
	Н	90	90	90
	L	70	70	70
Weight (kg)		0.24	0.24	0.24



Specifications

SUP2-PV series surge protector		SUP2-PV					
PV DC-Specific(IEC 661	43-1/EN 61643-11)						
Pole		2P	2P	2P	2P	2P	
Electrical Parameter							
Classified Test		11	11		11	11	
Un(V DC)		48	110	150	220	360	
Uc(V DC)		65	150	200	300	500	
In(8/20us(kA)		20	20	20	20	20	
lmax(8/20us(kA)		40	40	40	40	40	
Up(KV)		≤0.8	≤1.0	≤1.6	≤2.0	≤2.6	
Remote Control and indi	cation						
Indication Window							
Plug-in module							
Remote signal contact							
Remote signal contact	maximum working voltage(V)	250 AC/30V DC	250 AC/30V DC	250 AC/30V DC	250 AC/30V DC	250 AC/30V [
	maximum working current(A) 1A(250V/AC)	1A(250V/AC)	1A(250V/AC)	1A(250V/AC)	1A(250V/AC)	1A(250V/AC)	
	1A(30V DC)	1A(30V DC)	1A(30V DC)	1A(30V DC)	1A(30V DC)	1A(30V DC)	
Wiring & Installation	***************************************					•••••••	
Wiring capacity	Hard Wire	4~25	4~25	4~25	4~25	4~25	
	Flexible Wire	4~16	4~16	4~16	4~16	4~16	
Stripping length		10	10	10	10	10	
Terminal screw		M5	M5	M5	M5	M5	
Torque(Nm)	Main Circuit	3.5	3.5	3.5	3.5	3.5	
	Remote signal contact	0.25	0.25	0.25	0.25	0.25	
	All profile	IP40	IP40	IP40	IP40	IP40	
Protection class	Connection port	IP20	IP20	IP20	IP20	IP20	
Installation environment		No obvious shock	and vibration			•••••	
Altitude(m)		≤2000	≤2000	≤2000	≤2000	≤2000	
Working Temperature		-40°C∼+80°C	-40°C∼+80°C	-40°C∼+80°C	-40°C∼+80°C	-40°C∼+80°C	
Relative humidity		30%~90%	30%~90%	30%~90%	30%~90%	30%~90%	
How to Install		Installed with H35	-7.5/DIN35 stell mou	nting rail			
***************************************	w	36	36	36	36	36	
Size(mm)(W×H×L)	н	90	90	90	90	90	
	L	67.6	67.6	67.6	67.6	67.6	
Weight(kg)		0.24	0.24	0.24	0.24	0.24	



Visual Status Indication Remote Signal

SUP2H1-PV Photovoltaic Surge Protective Device

The Cooper suntree three-module photovoltaic Surge Protective Device (SPD) (with three-step DC switching device) features visual indication and optional remote contact signaling (floating changeover contact) for use in PV systems.

These complete surge protective devices are suitable for all PV systems in accordance with IEC 61643-31. Includes a five year limited warranty.

These prewired solutions consist of a base and locking modules that feature a combined disconnection and short-circuiting (shunting) device with safe electrical isolation to prevent fire damage due to DC arcs. An integrated DC fuse allows safe module replacement without arc formation.

In case of insulation faults in the generator circuit, a reliable and tested fault-resistant Y circuit prevents damage to the surge protective devices.


The green and red visual indicator flags show the module protective status (green = good, red = replace). Apart from this visual indication, the remote signaling option features a three terminal floating changeover contact that can be used as a make or break contact depending on the particular monitoring system design employed.




Dimensions(mm)

Contact Available

Module Circuit Diagrams

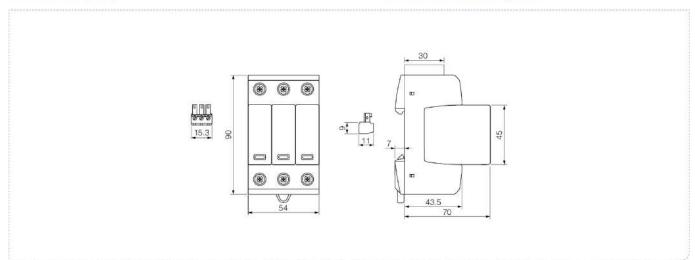

Short-Circuit Interrupting (SCI) Technology

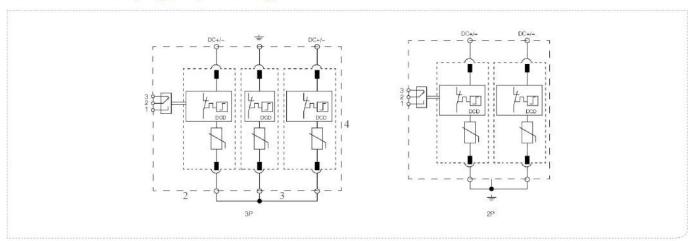




Specifications

SUP2H-PV series surge protector		SUP2H1-PV	SUP2H-PV	SUP2-PV	
UCPV(V DC)		1000V	1200V	1500V	
Max System Discharge Current (8/20 μs) [lmax]		40kA	40kA	40kA	
Voltage Protection Level [UP]		≤4.0kV	≤4.5kV	≤4.5kV	
Voltage Protection Level at 5kA [UP]		≤3.6kV	≤4.0kV	≤5.0kV	
Integrated Fuse Breaking Capacity/Interrupting Rating		40kA/1000Vdc	40kA/1200Vdc	40kA/1500Vdc	
Technology		Short-Circuit Interruption (SCI) Overcurrent Protection			
Operating Temperature Range [TU]		-40°C to +80°C			
Nominal Discharge Current (8/20 µs) [(DC+/DC-)> PE] [In]		20kA			
Response Time [tA]		<25ns			
Operating State/Fault Indication		Green (good)/Red (replace)			
	Minimum	60/75°C 1.5mm²/14AWG Solid/Flexible			
Conductor Ratings and Cross-Sectional Area:	Maximum	60/75°C 35mm²/2AWG Stranded/25mm²/4AWG Flexible			
Mounting		35mm DIN Rail per EN 60715			
Enclosure Material		UL 94V0 Thermoplastic			
Degree of Protection		IP20			
Capacity		3 Modules, DIN 43880			
Standards Information:		IEC 61643-31 Type 2, IEC 61643-1 Class II			
Product Warranty		Five Years**			

Remote Contact Signaling

Remote Contact Signaling Type	Changeover Contact	
AC Switching Capacity (Volts/Amps)	250V/0.1A	
DC Switching Capacity (Volts/Amps)	250V/0.1A; 125V/0.2A; 75V/0.5A	
Conductor Ratings and Cross-Sectional Area for Remote Contact Signal Terminals	60/75°C Max. 1.5mm²/14AWG Solid/Flexible	
Ordering Information	Order from Catalog Numbers Above	


Typical Application Schematics

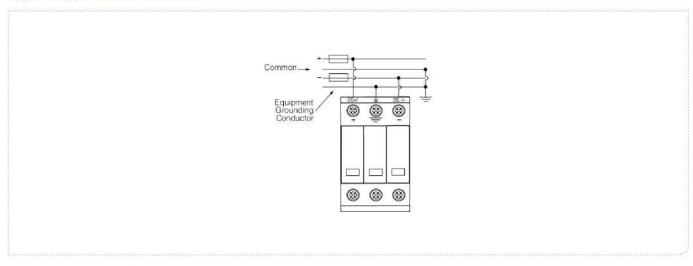


- * Does not apply to 1200Vdc.
- 1. Use a suitable electrical insulator to keep a 10mm min. safety distance from the PV-SPD and other grounded parts in the housing.
- 2. No metal covers are in the area of the module release buttons as shown.

Conductors and Busbars for Use in Photovoltaic Systems

IEC 60364-7-712 (DIN VDE 0100 Part 712)

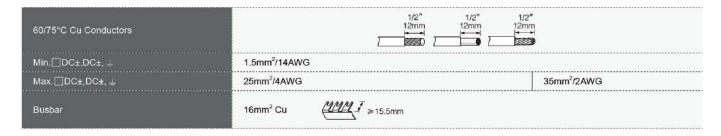


Visual Indication Status



Fault Indication & Remote Contact Signaling (with modules installed)



Testing Remote Contact Signaling (with modules removed)



Remote Contact Signaling

